



1 Unscrew and pull down cylinder.

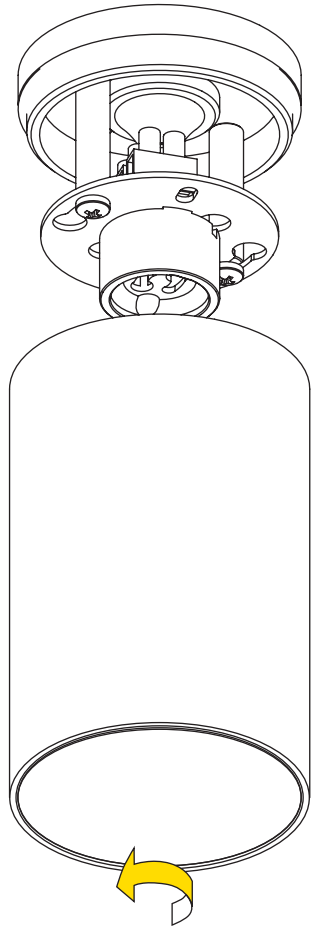

2 Pull down plate with socket.
Fix and make electrical connection.

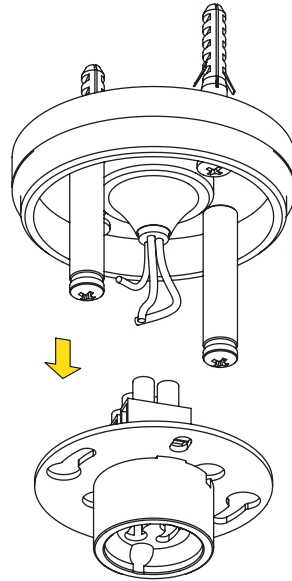

3 Reassemble.

