





KVADRA

- KVADRA SLIM 2251
- KVADRA 2252
- KVADRA POINT 2254
- KVADRA ROUND BACK 2352

- 2251
- 2252
- 2254
- 2352


KVADRA SLIM

1. CUT-OUT THE REQUIRED MOUNTING APERTURE IN THE SUSPENDED CEILING.
2. MAKE THE ELECTRICAL CONNECTION.
3. FIX THE BODY TO THE CEILING.
4. INSTALL THE BULB.

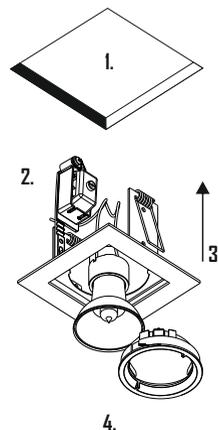


KVADRA

1. CUT-OUT THE REQUIRED MOUNTING APERTURE IN THE SUSPENDED CEILING.
2. MAKE THE ELECTRICAL CONNECTION.
3. FIX THE BODY TO THE CEILING.
4. INSTALL THE BULB.

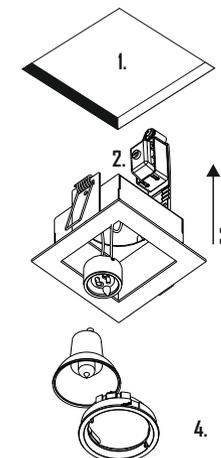


KVADRA POINT

1. CUT-OUT THE REQUIRED MOUNTING APERTURE IN THE SUSPENDED CEILING.
2. MAKE THE ELECTRICAL CONNECTION.
3. FIX THE BODY TO THE CEILING.
4. INSTALL THE BULB.

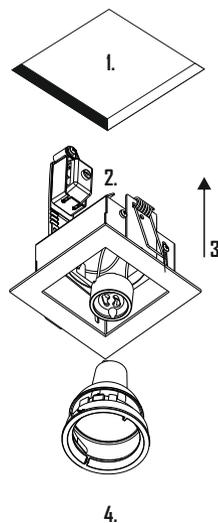

KVADRA ROUND BACK

1. CUT-OUT THE REQUIRED MOUNTING APERTURE IN THE SUSPENDED CEILING.
2. MAKE THE ELECTRICAL CONNECTION.
3. FIX THE BODY TO THE CEILING.
4. INSTALL THE BULB.

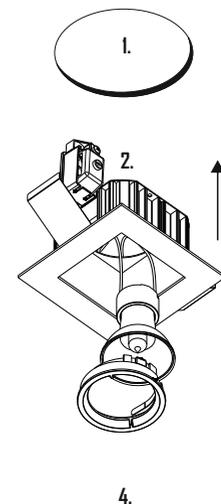

DEKKO

12-16 DRAGAN TSANKOV BLVD
1164 SOFIA,
BULGARIA

T +359 (0)2 8168116
F +359 (0)2 8168118

office@dekko.net
www.dekko.net